



# Pocket Style Flare / Extend-A-Fender Flare Mud Flaps

**BWM-REAR Rev-A 05-13-2020**

For complete fitment info visit: [www.bushwacker.com](http://www.bushwacker.com)

## STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker® only approves installing the Mud Flaps using the hardware provided. **WARNING:** Failure to install using this hardware will invalidate the warranty. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the mud flaps.
- B) **Fit:** Verify the fit of the Mud Flaps to your flares. (Some filing, sanding, may be necessary to ensure proper fit). Clean your fender flares of dirt and debris.
- C) **Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between Mud Flaps and exhaust pipes. (Exhaust gases should not vent directly onto Mud Flaps)
- D) **Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing Mud Flaps.

## TOOLS FOR EASY INSTALLATION:

- Cleaning Cloth
- Grease Pencil
- Phillips Screwdriver
- Electric Drill with Phillips, 5/16", & 3/8" Bits



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.




## LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

## Included in Hardware Kit:

- |    |  |    |  |    |  |    |  |
|----|--|----|--|----|--|----|--|
| 1. |  | 2. |  | 3. |  | 4. |  |
|    | RV1-P006<br>PLASTIC<br>PUSH<br>FASTENER  |    | RV1-P008<br>PLASTIC<br>PUSH<br>FASTENER  |    | RV1-P016<br>PLASTIC<br>PUSH<br>FASTENER  |    | SW1-0056<br>METAL<br>PANEL<br>SCREW  |
|    | 6 pcs.   |    | 4 pcs.   |    | 4 pcs.   |    | 6 pcs.   |

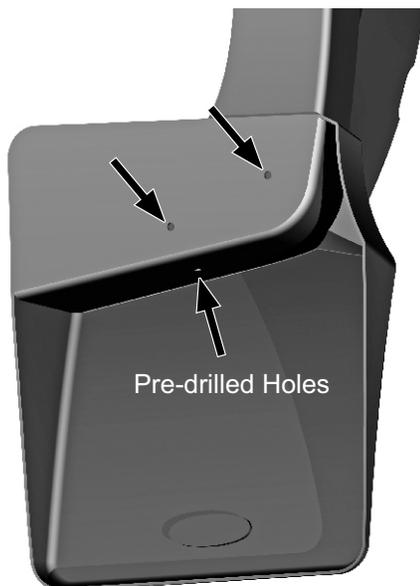

Identify which of the enclosed fasteners best suits your Fender Flare and Mud Flap combination. Hold the Mud Flap up to your Bushwacker® Fender Flare and mark the hole locations using a grease pencil. Pre-drill holes in the Fender Flare where you will use plastic push fasteners. **Pre-drilled holes are not necessary if using screws.**

Secure the mud flap to the Bushwacker® fender flare by inserting fasteners through the pre-drilled holes in the Mud Flap. Some applications utilize pre-existing hardware locations that line up with fasteners on your Bushwacker® Fender Flares. In these cases it will be necessary to remove the fastener and reinsert it with the Mud Flap in place.