

TRANSIT CONNECT VANRUG/VANTRED INSTALLATION INSTRUCTIONS


**** FOR VEHICLES WITHOUT REAR SEAT ****

****DETERMINE TYPE OF FACTORY MAT INSTALLED IN VEHICLE****

THE INSTALLER MUST EITHER:

1. REMOVE FLAT SURFACED FACTORY RUBBER MAT (IF EQUIPPED)**
- OR
2. DO NOT REMOVE MOLDED FACTORY MAT (IF EQUIPPED)**

IF EQUIPPED,
REMOVE FACTORY REAR DOOR
TRIM AND REINSTALL OVER
EDGE OF VANRUG/VANTRED
THROUGH EXISTING HOLES IN
VAN FLOOR.

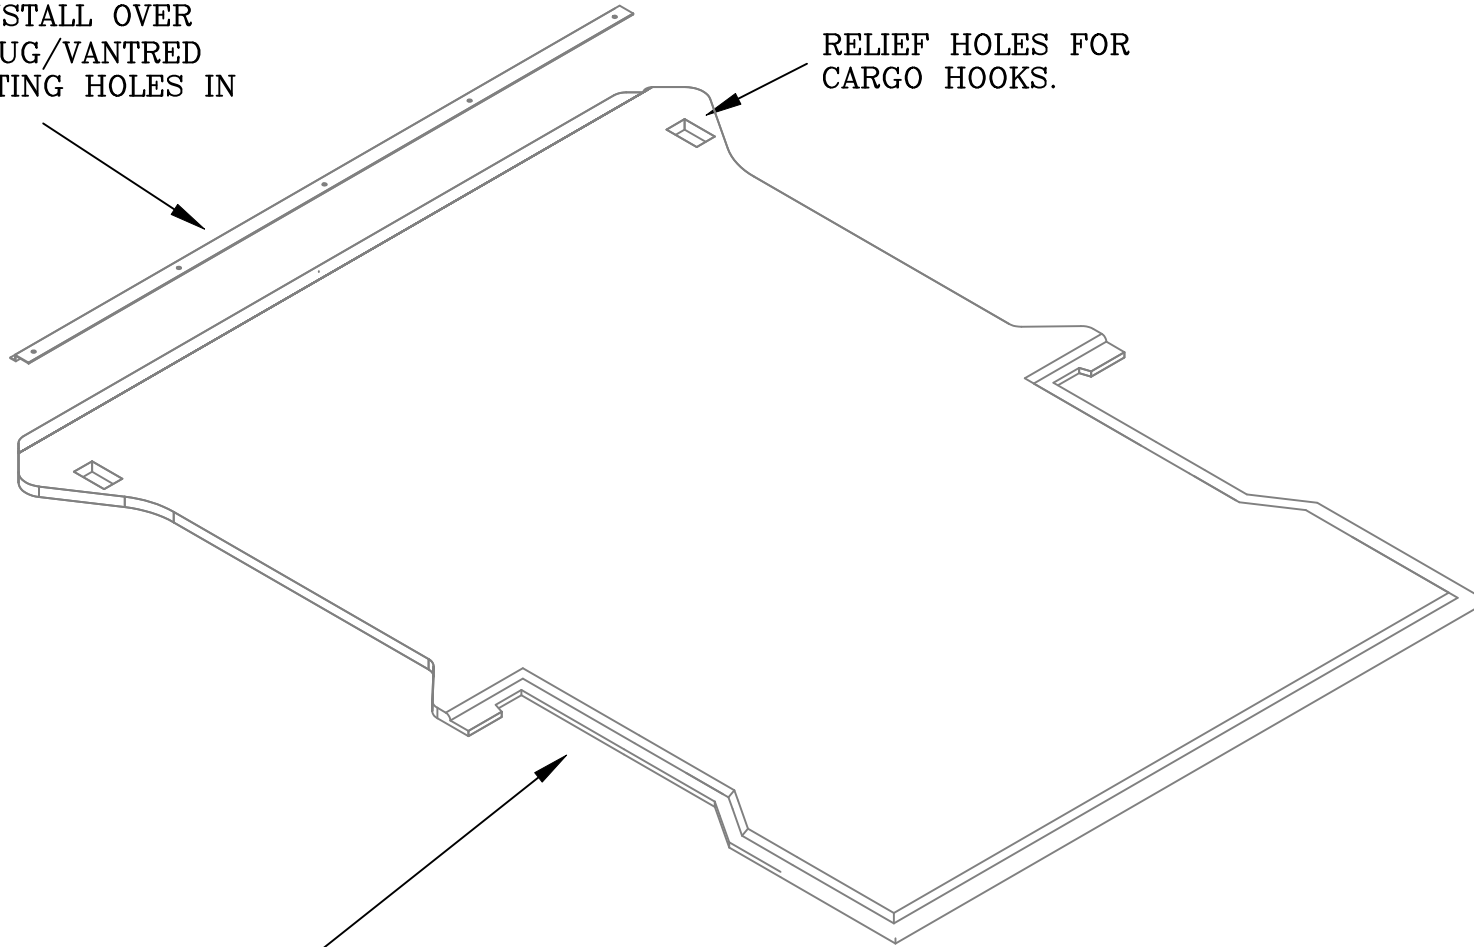

REMOVE THE FOUR PLASTIC
FASTENERS ON THE SIDE DOOR STEP
PLATES. TUCK VANRUG/VANTRED
UNDER STEP PLATES THEN INSTALL
WITH NEW FASTENERS PROVIDED.

BEDRUG, Inc.

BedRug, Inc. claims the proprietary rights in the material disclosed hereon. Neither this drawing nor any production thereof may be exhibited to outside parties nor used to design or manufacture anything shown hereon without written permission from BedRug, Inc. to the user specifically referring to this drawing or the information disclosed hereon.

TCINST2
REV. 2 1/7/2013