



INSTALLATION INSTRUCTIONS

360-SERIES SUBARU FOG LIGHT KIT



KIT INCLUDES

- (2) RIGID 360-Series SAE Lights
- (2) Wiring Plug Kits
- Mounting Brackets
- Mounting Hardware

**THIS KIT FITS THE FOLLOWING VEHICLES:
2012-2016 BRZ, and 2015-2018 WRX/STI**

IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.
Please read through all of these Instructions and tips before proceeding with the installation.
We do our best to provide a simple installation process for all applications however
a professional installation is always recommended.


**Always disconnect any power sources connected to your vehicle
before servicing fuses or electrical systems.**

STEP 1

Take both lights and place lens side down on a non scratch surface. Snap the 4 fog light mounting bushings into place. Once snapped into place take the 8 socket head cap screws and snug the pivot adaptors into place. Torque spec 8 in/lbs .

See Figure 1

FIGURE 1

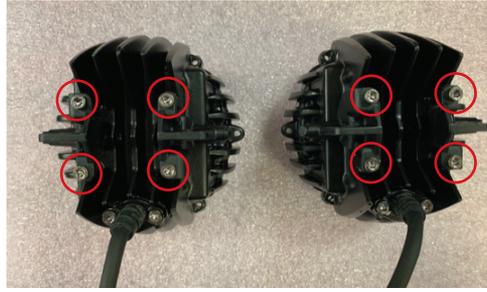

STEP 2

Place the brackets onto the light.

See Figure 2

FIGURE 2



STEP 3

Once the brackets are on snug the hardware down to secure the bracket to the light.

See Figure 3

FIGURE 3



STEP 4

Assembly of the H16/H11 plug. Use the provided heat shrink butt connectors to crimp onto the flying leads. Then crimp the flying leads from the light into the opposite end of the butt connectors. Crimp the connectors then use heat to shrink the tubing around the connectors to complete the plug install. Double check vehicle wiring so the power wire & ground will mate on their respective side of plug indicator.

See Figures 4.1, 4.2, 4.3, & 4.4 (for H11)

See Figures 4.5, 4.6, & 4.7 (for H16)

FIGURE 4.1



FIGURE 4.2



FIGURE 4.3



FIGURE 4.4

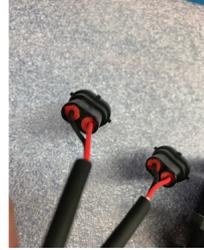


FIGURE 4.5



FIGURE 4.6



FIGURE 4.7



STEP 5

Gain access to your fog cavity through inner wheel liner. Unplug the factory wiring harness from the back of the factory fog light. Remove the factory hardware (Philips Screws) holding the factory fog light in its cavity. Reuse the factory hardware to install the new kit.

See Figures 5.1 & 5.2

FIGURE 5.1



FIGURE 5.2



STEP 6

Insert the RIGID 360-Series Light in the factory housing. Use the factory hardware to screw the brackets into place. Plug the SAE Fog Light into the factory harness. Secure the extra light ingress wire up and out of the way. Aim the fog lights prior to re-attaching your access point (Follow your local fog light position laws). Once aimed tighten the hardware (32in/lbs) securing the bracket to the light. Now reattach the access points and the install is now complete.

See Figures 6.1 & 6.2

FIGURE 6.1



FIGURE 6.2



**Your installation is now complete.
Welcome to the Rigid Nation!**

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com

RIGID, 360-Series and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-13647-A