



# NOTICE

## ASSEMBLY OF DODGE RAMBOX™ COVER TO TRUCK

**STEP 1.** Remove the end cap from the driver side cargo rail.

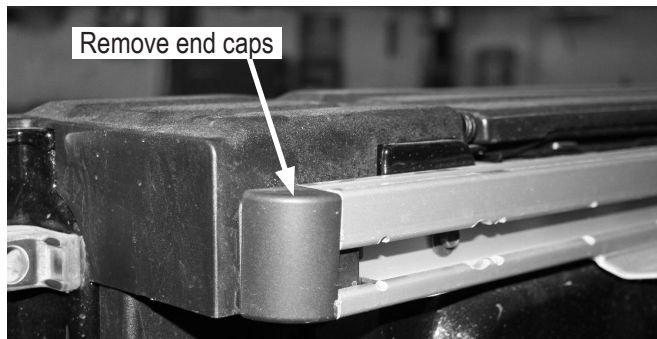


**STEP 2.** Assemble hardware as shown.

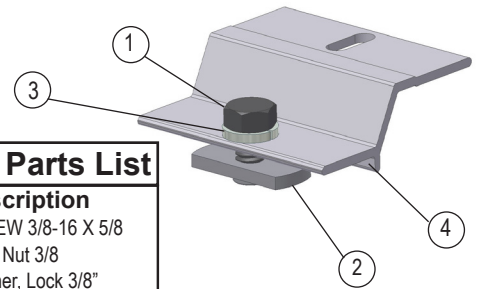


### Replacement Parts List

Item	Part #	Description
1.	1704353	SCREW 3/8-16 X 5/8
2.	1704373	Weld Nut 3/8
3.	1704374	Washer, Lock 3/8"
4.	1704246	Clamp Bracket Rambox


**STEP 3.** Slide three assembled brackets into each track of the driver and passenger side cargo rail.

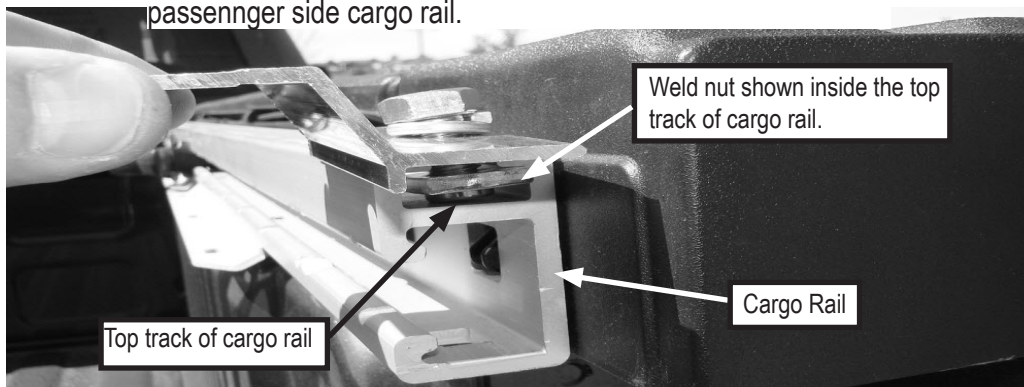


**STEP 4.** Apply corner seal to front inside corner of box.

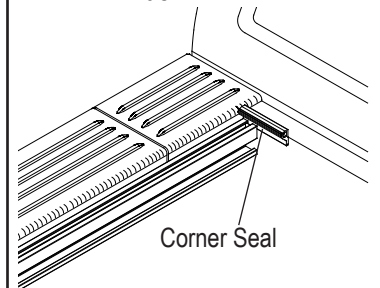

**STEP 5.** Starting from the front bulkhead of the Rambox™ place brackets at the dimensions shown and then tighten.

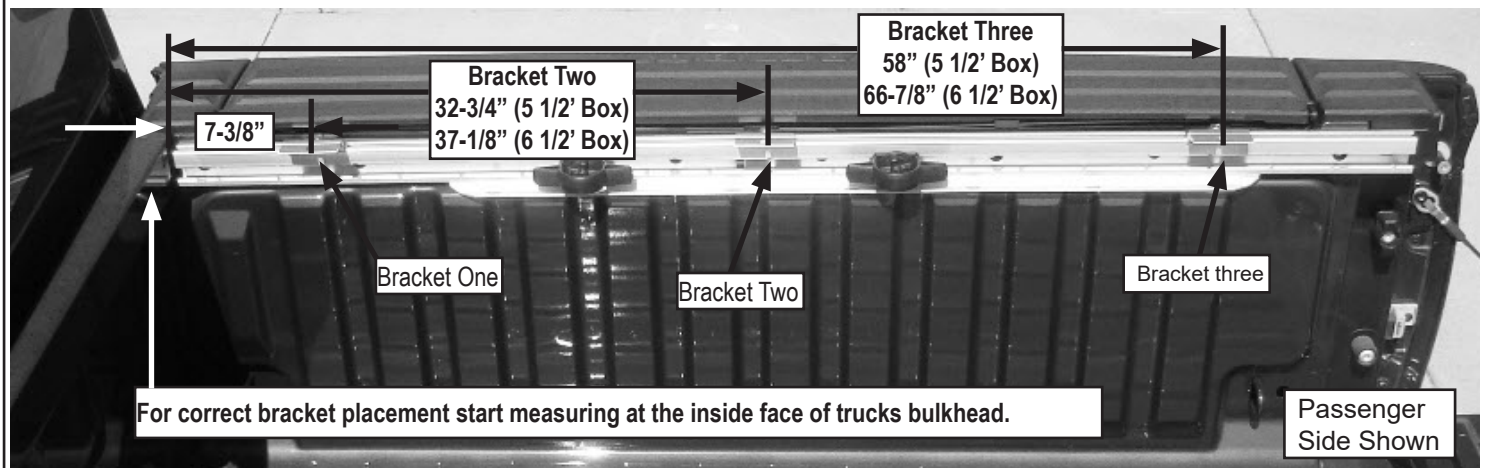

**STEP 6.** Fasten the rail to the brackets with the hardware shown.

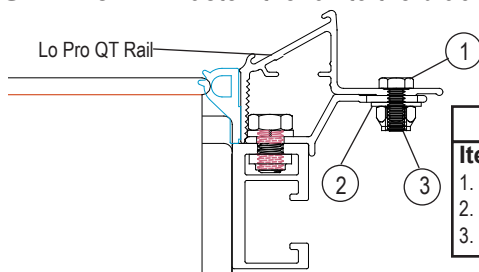

### Replacement Parts List

Item	Part #	Description
1.	1703852	SCREW 1/4-20 X 5/8
2.	1700427	Washer 1/4
3.	1701543	Nut 1/4-20


**STEP 7.**

Follow steps 1 through 6 to mount the driver side rail. After the side rails are attached insert the plastic cargo rail end caps. Refer to the owners manual for instructions on how to attach the cover assembly and for other operations of the truck cover. SEE REVERSE SIDE FOR MORE SEALING OPTIONS.

## ADDITIONAL SEALING AROUND TAILGATE


**STEP 1.** Apply seal 1116265 to bed caps as shown in the next two steps to help seal gap between bed cap and tailgate.

Replacement Parts List		
Item	Part #	Description
1.	1116265	SIDE RAIL CAB SEAL_4.50_TR

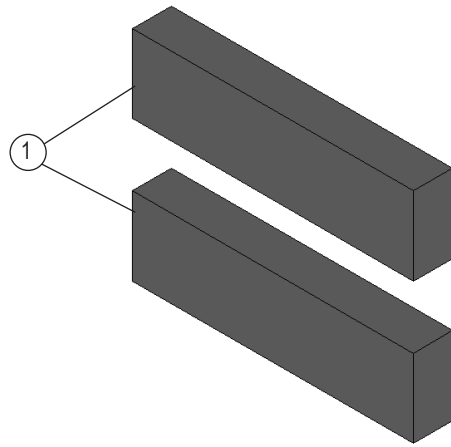

**STEP 2.** Once Lo Pro Rails are installed, clean the area shown below on Driver and Passenger side with wet rag.

Clean this area.

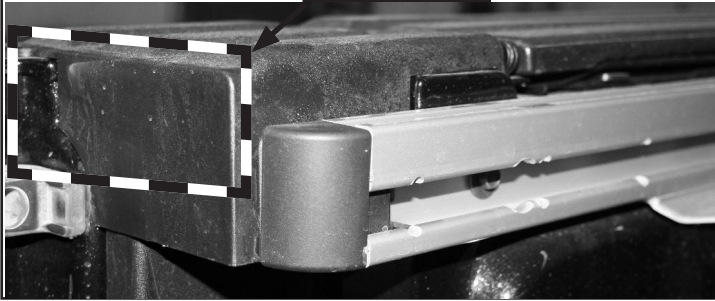

**STEP 3.** Apply Seal on Driver and Passenger Side as shown below.

