

## INSTRUCTIONS—INSTRUCCIONES—CONSIGNES


APPLICATION: UNIVERSAL SHORT/LONG BED TRUCK, FORD SUPERDUTY F250,350 SHORT/LONG BED APP PART # 57-6102

## UNIVERSAL HDX OVERHEAD TRUCK RACK CLAMP KIT

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	UPPER CLAMPS	16MM SOCKET
2	2	LOWER CLAMPS	RATCHET
3	2	M10 HEX HEAD BOLTS	TORQUE WRENCH
4	2	M10 LOCK WASHERS	

## ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

- Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation. Assemble the truck rack kit per the instructions before moving to step 2.
- Take the (U) shaped lower clamp and place it underneath the bed rail so that only the threaded portion is showing. (Fig 2). Then take the upper clamp and place it on top of the truck rack bed rail. Align the threaded hole in the bottom clamp with the hole in the top clamp and attach them both together using the supplied M10 hardware (Fig 3). Anti seize is suggested for these fasteners as the bottom clamp is aluminum, and will prevent the bolts from becoming seized over time. Tighten all fasteners to 25 ft lbs

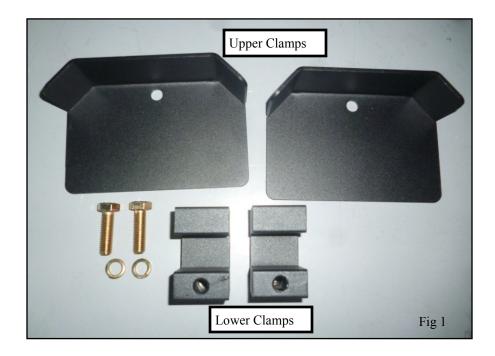

## CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.

1

GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



P N · 75-3028-RevB

Westin Automotive Products, Inc.

320 Covina Blvd San Dimas, Ca. 91773

Thank You for choosing Westin products For Additional installation assistance please call Customer service (800) 793-7846 www.westinautomotive.com

ECO #: W13-0103

DATE: 11/12/13







Westin Automotive Products, Inc. 320 Covina Blvd San Dimas, Ca. 91773