



INSTALLATION INSTRUCTIONS

APPLICATION:

2006-2009 Dodge 2500-3500

AUTOMOTIVE PRODUCTS, PART NUMBER:

58-160625/58-16062R

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	6	1/2" x 3 1/2" Bolt	10 MM SOCKET
2	8	1/2" x 1 1/2" Bolt	3/4" SOCKET
3	14	1/2" Nut	18 MM WRENCH
4	4	M8 - 1.25 X 14 MM CAP SCREW	3/4" WRENCH
			RATCHET WITH EXTENSIONS

REMOVAL

1. Disconnect the factory fog lights if equipped.
2. Remove the upper inter-cooler bolts using a 10mm socket and ratchet.
3. While supporting the bumper, remove the 4 nuts and bolts that fasten the bumper to the frame rail (Image 1) Note: the inter-cooler must be lifted in order to remove the bolt plates.
4. Remove the factory bumper.
5. Reinstall the 2 upper inter-cooler bolts.



Image 1



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846

INSTALLATION

1. Install the frame brackets to the frame rails with the angled portion of the bracket facing upward and the long side of the bracket facing inward (Image 2).
2. Use the factory bolt plates to attach the brackets to the frame facing the bolts inward, leaving hardware loose.
3. Install the intermediate brackets to the bumper using 6 - 1/2" x 3 1/2" bolts and 1/2" nuts, the long side of the bracket and the bolts should face outwards.
4. Lift the bumper and position it on the truck by lining up the holes on the intermediate brackets with the holes on the frame brackets, loosely install the 8 - 1/2" x 1 1/2" bolts and 1/2" nuts.
5. Adjust the bumper to achieve proper alignment.
6. Tighten all hardware.

NOTE: Install winch and roller fairlead prior to installing bumper on to truck, if installing a winch.

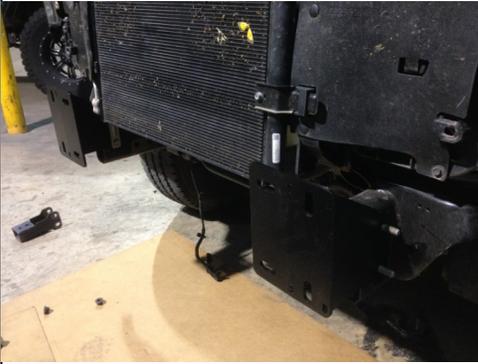


Image 2



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773