


## CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater<sup>TM</sup> Floor Liner from Winfield Consumer Products. Your new 2<sup>nd</sup> seat liner is custom molded to fit your Ford Expedition / Ford Expedition Max. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners*. However, do not remove the factory-installed carpeting.

Your liner is molded using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## SECOND SEAT FLOOR LINER INSTALLATION INSTRUCTIONS FOR FORD EXPEDITION & EXPEDITION MAX MODELS WITH $2^{ND}$ ROW BENCH SEATS

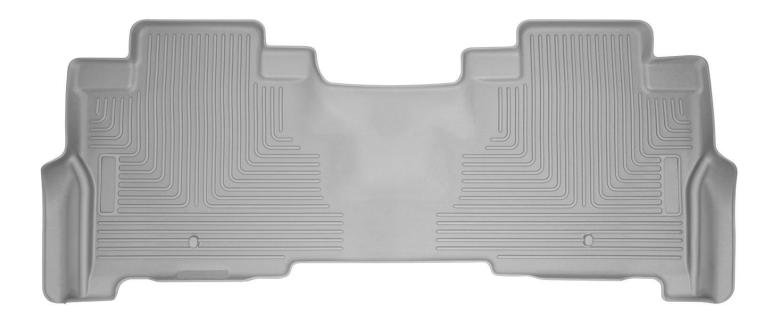

PRIOR TO INSTALLING YOUR  $2^{nd}$  SEAT LINER, SLIDE BOTH FRONT ROW SEATS COMPLETELY FORWARD AS THIS WILL ALLOW EASIER ACCESS TO THE FLOOR IN THE  $2^{ND}$  ROW. WITH THIS DONE, INSTALL THE LINER, POSITIONING IT AS SHOWN ABOVE. WITH THE LINER INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.