



INSTALLATION INSTRUCTIONS

PROTRAXX 5

AUTOMOTIVE PRODUCTS,

APPLICATION:


2009-2015 Dodge Ram 1500 Crew Cab/Quad Cab
 2010-2015 Dodge Ram 2500/3500 HD Crew Cab

PART NUMBER:

21-53550, 21-53555, 21-53560, 21-53565

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1,2	2	STEP BAR (DRIVER/PASSENGER)	13MM SOCKET
3	2	MOUNTING BRACKET "A"	17MM SOCKET
4	3	MOUNTING BRACKET "B"	ALLEN KEY (INCLUDED)
5	1	MOUNTING BRACKET "C"	
6	5	M10 BOLT/ M8 NUT PLATE (YELLOW ZINC)	3/8" WRENCH
7	12	M8 HEX HEAD BOLT (YELLOW ZINC)	DRILL
8	12	M8 FLAT WASHER (YELLOW ZINC)	1/4" DRILL BIT
9	12	M8 SPLIT LOCK WASHER (YELLOW ZINC)	RATCHET
10	7	M8 RIV-CERTS (YELLOW ZINC)	TORQUE WRENCH
11	5	M10 FLAT WASHER (YELLOW ZINC)	
12	5	M10 HEX NUT (YELLOW ZINC)	
13	5	M10 LOCK WASHER (YELLOW ZINC)	
14	12	M10 BUTTON HEAD BOLT (BLACK STAINLESS STEEL)	
15	12	M10 FLAT WASHER (BLACK STAINLESS STEEL)	
16	12	M10 INTERNAL TOOTH LOCK WASHER (BLACK STAINLESS STEEL)	
17	5	M10 PLASTIC RETAINER	
18	2	M6 BUTTON HEAD BOLTS (STAINLESS STEEL)	
19	2	M6 FLAT WASHERS (STAINLESS STEEL)	
20	2	M6 SERRATED FLANGE NUT (STAINLESS STEEL)	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

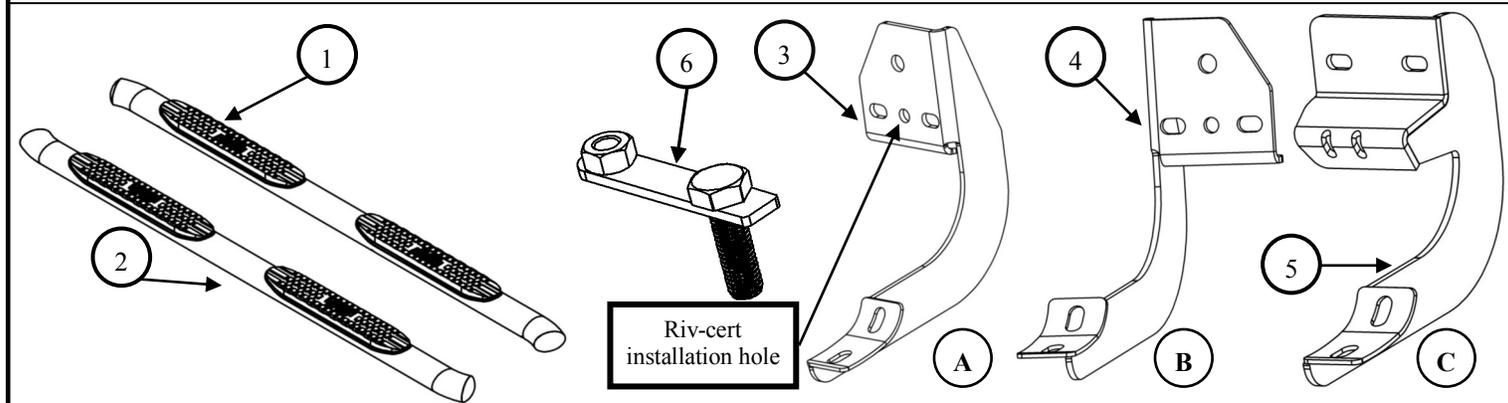

Westin Automotive Products, Inc.
 320 W. Covina Blvd
 San Dimas, Ca. 91773

Thank you for choosing Westin products.
 For additional installation assistance please call
 Customer Service (800) 793-7846





PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.

Carefully read and understand all instructions before attempting installation.

Failure to identify damage before installation could lead to a rejection of any claim.





2. Check either side of the vehicles rocker panel, locate the factory holes in the rocker panel by removing the tape. Check and verify what type of rocker panel you have. **See Fig. 1, 2, 3, & 4.** *Note:* If any of the locations on the factory holes in the rocker panel have factory M8 riv-certs or threaded M8 holes, do not use provided M8 riv-certs (Item 10) in that location. **Refer to Fig. 1, 2 & 4.)**
3. **Starting from the driver side:** If the threaded holes are not present use (2) M8 riv-certs (item 10) and insert them into the hex holes. *Note:* See Figure 6 for example on how to tighten M8 riv-certs, it will require to use an M10 bolt with M8 nut plate (item 6) along with bracket (item 4) to perform this task. Use Figure 8 on how to position (item 6). This procedure will permanently install M8 riv-cert. Remove (item 6) after the riv-certs are tightened.
4. Proceed to install mounting bracket "C" (item 5) onto the rocker panel by using (2) M8 hex bolts (item 7), (2) M8 lock washers (item 9), (2) flat washers (item 8). For the pinch weld, attach bracket (item 5) by using (2) M6 Button head bolts (item 18), (2) M6 flat washers (item 19) & (2) M6 serrated flange nuts (item 20). *Note:* Drilling of two 1/4" holes might be necessary on pinch weld if factory holes are not present. Before drilling place masking tape on drill surface to prevent paint chipping.) **See Fig. 9 & 10.**
5. On the middle mounting location of drivers side attach (1) M8 riv-cert to rocker panel if not already present. Then proceed to install (1) M10 bolt/M8 nut plate (Item 6) into the rocker panel and thread (1) M10 plastic retainer (Item 17) to the M10 bolt to prevent it from falling into the rocker panel. **See Fig. 5.**

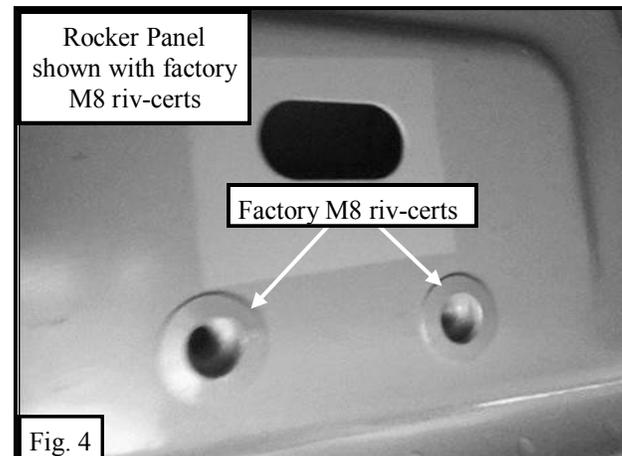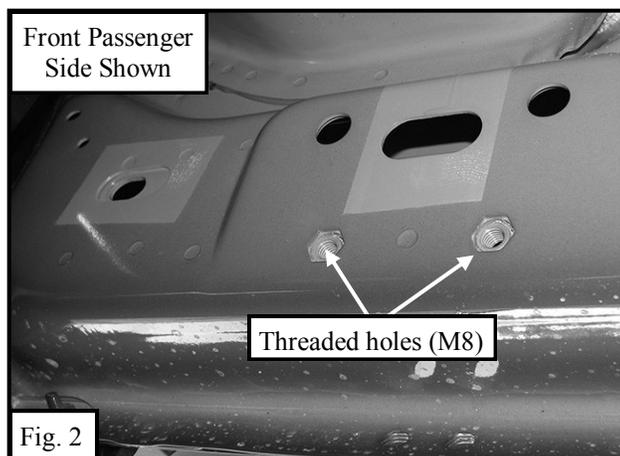
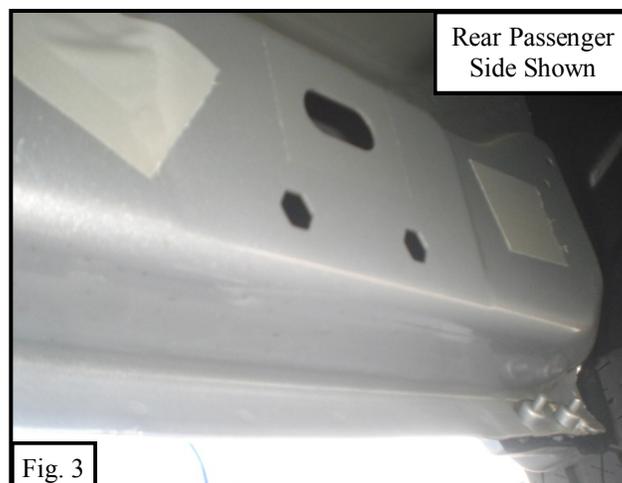
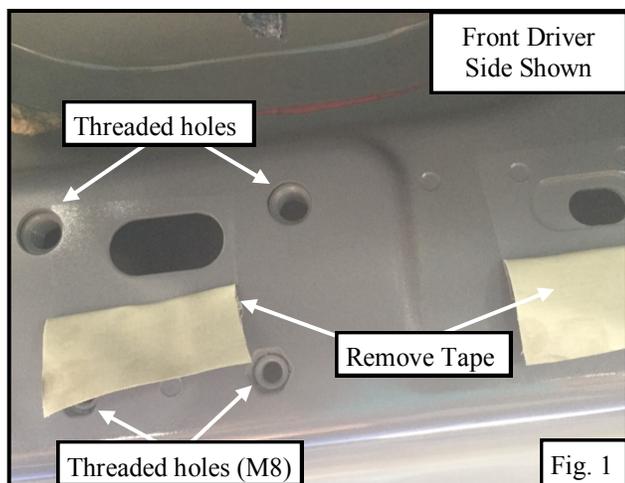




Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products.
For additional installation assistance please call
Customer Service (800) 793-7846

6. Attach mounting bracket "A" (item 3) to the rocker panel by first tightening the M8 riv-cert into place. **See Fig. 6.** Then continue by attaching bracket (item 3) and aligning (item 6) (as shown on figure 5), using (2)M8 Hex bolts (item 7), (2) M8 Lock Washers (item 9), (2) M8 Flat washers (item 8), (1) M10 flat washer (item 11), (1) M10 lock washer (item 13) & (1) M8 Hex nut (item 12). Leave everything loose at this time. **See Fig. 11.**
7. For rear mounting bracket installation of the drivers side use mounting bracket "B" (item 4) bracket and the same installation procedure as step 6.
8. **Starting from the Passenger side:** Insert (1) M10 bolt/M8 nut plate (Item 6) into the rocker panel and thread (1) M10 plastic retainer (Item 17) to the M10 bolt to prevent it from falling into the rocker panel. **See Fig. 5.**
9. If the front of the rocker panel has pre-installed M8 riv-certs, the M10/M8 plate (item 6) will need to be positioned as shown in Figure 8.
10. If the front rocker panel does not have pre-installed M8 riv-certs then (item 6) will be used as shown on Figure 5 & 11.
11. Attach mounting bracket "B" (item 4) to passenger front and center locations & mounting bracket "A" (item 3) to passenger rear using the same procedure as step 6.
12. Attach step bars (items 1 & 2) respectively to either side using (6) M10 button head bolts (item 14), (6) M10 internal toothed lock washers (item 16) & (6) M10 flat washers (item 15). **See Fig. 12 & 13.**
13. Align and adjust the step bars as needed then fully tighten all hardware at this time. Torque all M10 fasteners to 30 ft-lbs and M8 to 20 ft-lbs.

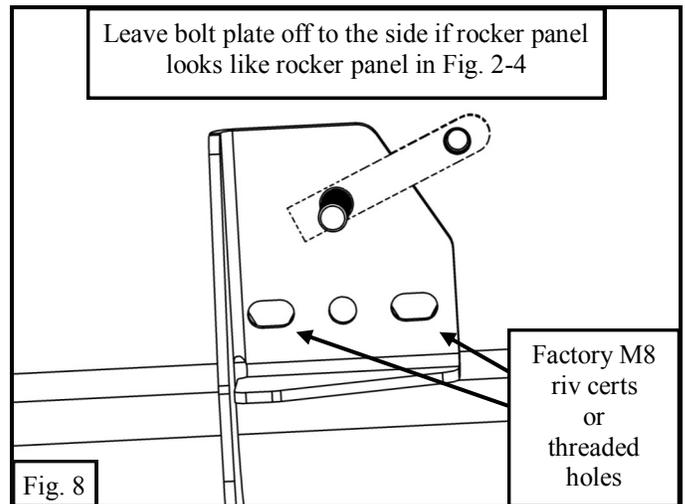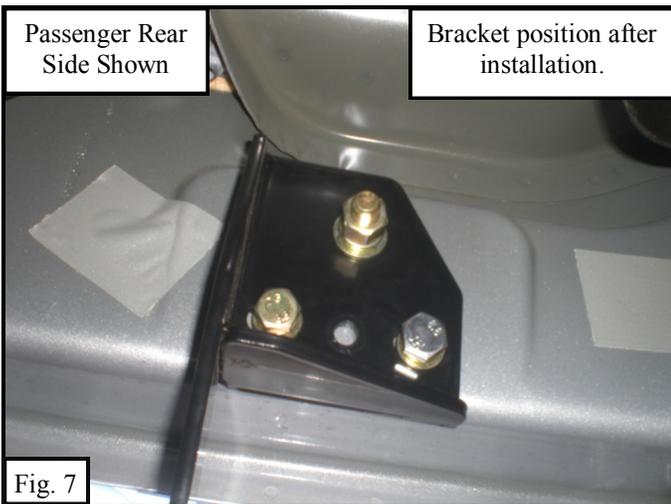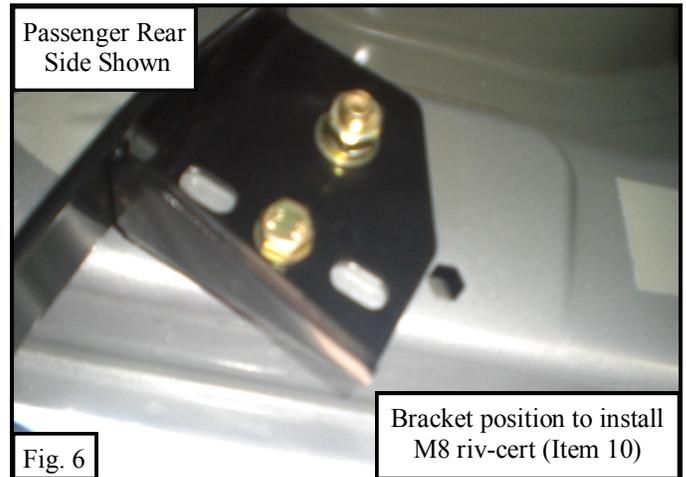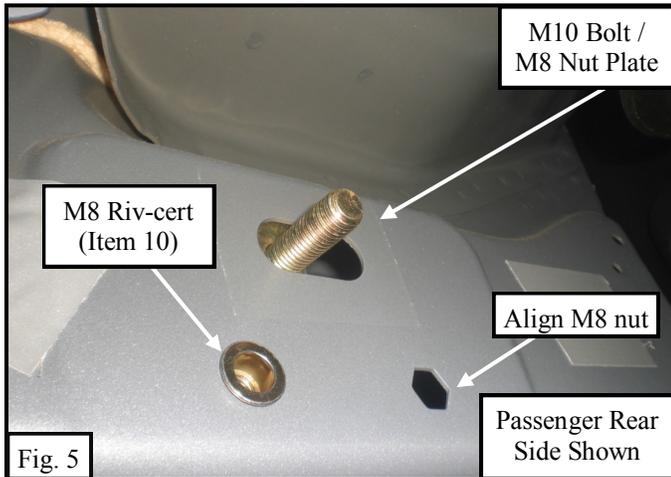

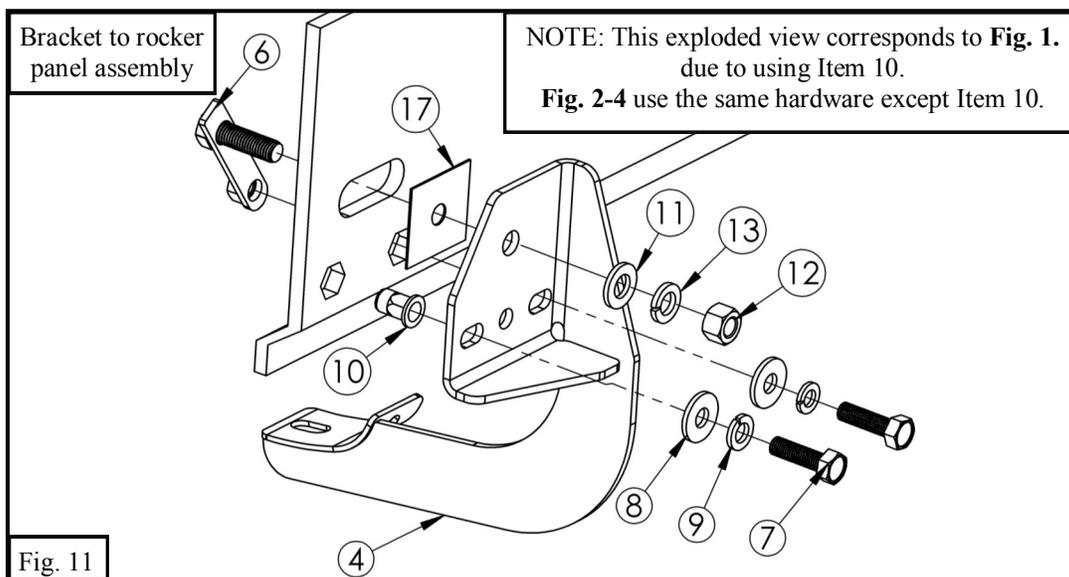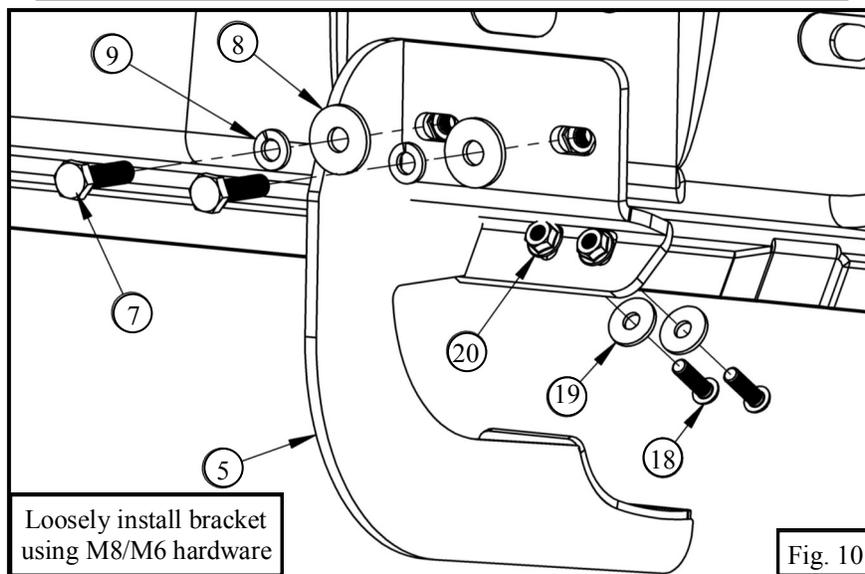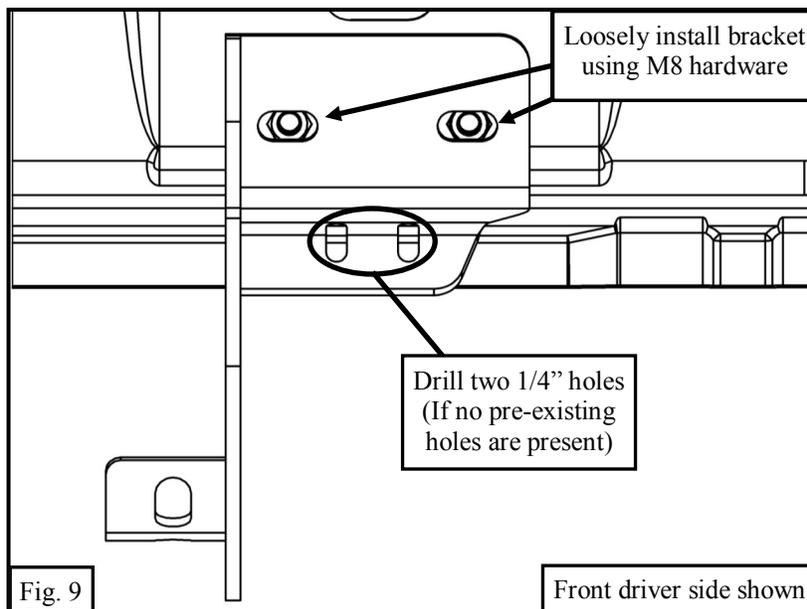

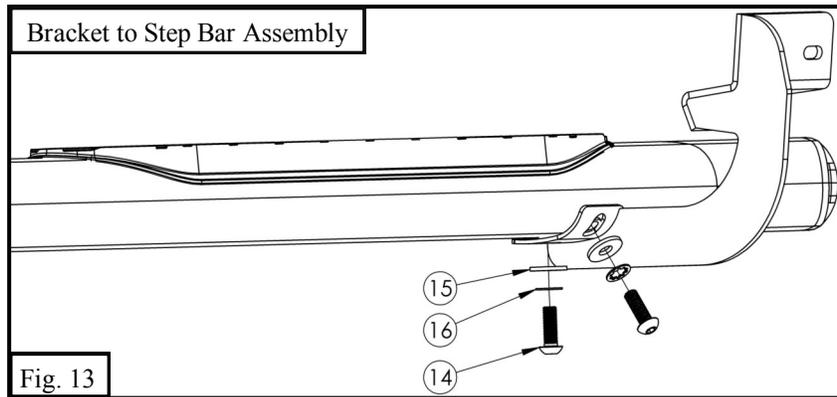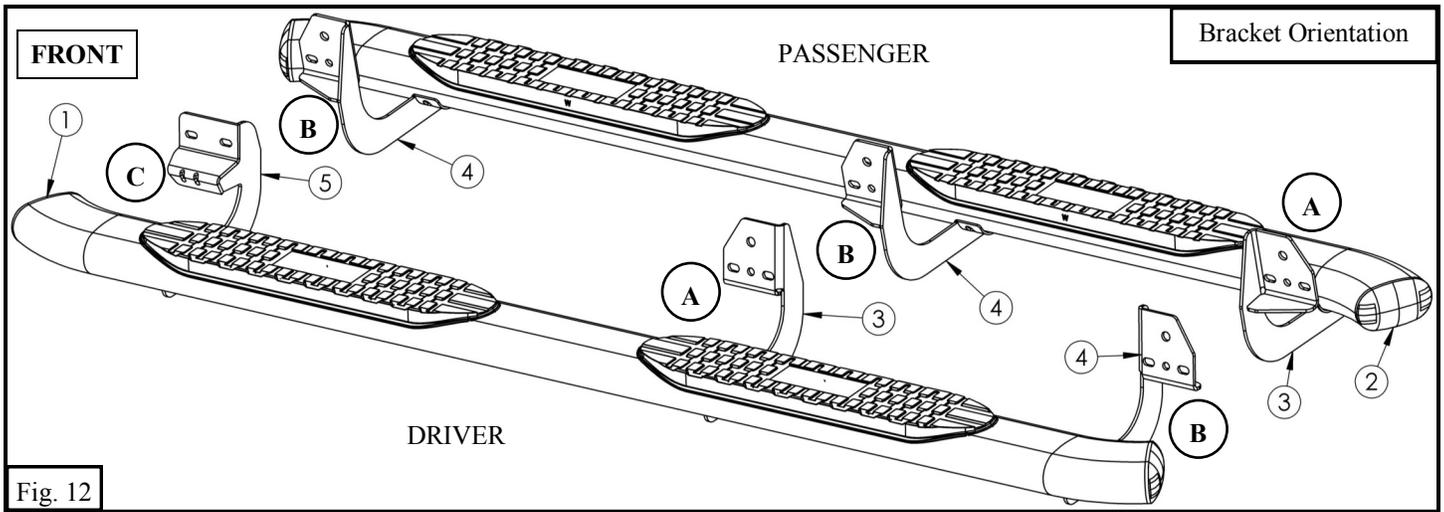

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products.
For additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

Westin
SIGNATURE OF QUALITY

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773